

## MabSelect™ VL Affinity chromatography Instructions for Use

MabSelect™ VL is an affinity Bioprocess chromatography resin for capturing monoclonal antibodies (mAbs) and antigen-binding fragments (Fabs) containing the kappa light chain. The product also enables separation of homodimers from heterodimers for kappa-lambda bispecific antibodies during the capture step.

The high binding capacity and the high flow base matrix make MabSelect VL suited for Protein L capture chromatography.

#### MabSelect VL provides:

- High dynamic binding capacity at commonly used residence times
- Highly concentrated elution pools for operating flexibility and small unit operations
- Alkaline stability in up to 0.1 M sodium hydroxide for Cleaning-In-Place (CIP)
- Simple scale-up to production-sized AxiChrom™ columns

cytiva.com 29704861 AA

## 1 Introduction

#### **Important**

Read these instructions carefully before using the product.

#### Intended use

The products are intended for research use and further manufacturing, and shall not be used in any clinical or *in vitro* procedures for diagnostic purposes.

#### Safety

For use and handling of the product in a safe way, refer to the Safety Data Sheets.

## 2 Bioprocess resins

Bioprocess chromatography resins are developed and supported for production-scale chromatography. All Bioprocess resins are produced with validated methods and are tested to meet manufacturing requirements. Secure ordering and delivery routines give a reliable supply of resins for production-scale.

Regulatory Support Files (RSF) are available to assist process validation and submissions to regulatory authorities. Bioprocess resins cover all purification steps from capture to polishing.

## 3 Product description


#### **Resin description**

MabSelect VL resin combines a rigid, high-flow agarose base matrix with a new generation of protein L ligand designed to have a higher dynamic binding capacity and higher alkali tolerance than Capto™ L resin. The ligand of MabSelect VL resin is recombinantly produced in *Escherichia coli* and originates from the bacterium *Peptostreptococcus magnus*. Fermentation and subsequent purification are performed in the absence of animal derived products. The ligand has been specifically engineered to bind antigen-binding fragment (Fab) and mAb derived products containing the immunoglobulin G (IgG) kappa light chain.

Alkali tolerance, high dynamic binding capacity at most commonly used residence times, low ligand leakage, and the rigid base matrix make MabSelect VL resin suited for diversified antibody processes involving the purification of mAb derived fragments and bispecific antibodies for clinical applications.

#### Resin dynamic binding capacity

MabSelect VL resin has a very high dynamic binding capacity at most commonly used residence times. The image below shows a comparison between the dynamic binding capacity of MabSelect VL resin and Capto L resin at 10% breakthrough (Q<sub>B10%</sub>) for IgGκ1, determined in Tricorn™ column.

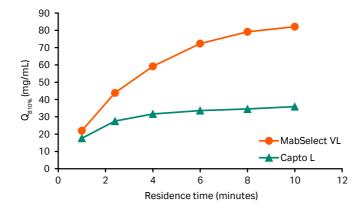

#### **Resin properties**

	MabSelect VL
Matrix	Rigid, highly cross-linked agarose
Particle size, d <sub>50V</sub> <sup>1</sup>	~ 60 µm
Ligand	Alkali-tolerant protein L ligand derived from <i>P. magnus</i> )
Coupling chemistry	Ероху
Dynamic binding capacity, $\mathbf{Q_{B10\%}}^2$	~ 60 mg lgGĸ1/mL resin, 4 minutes residence time ~ 70 mg lgGĸ1/mL resin, 6 minutes residence time
Chemical stability	Stable to commonly used aqueous buffers for protein L chromatography
pH stability	
Operational <sup>3</sup>	2.5 to 10
CIP <sup>4</sup>	2 to 13
Operating flow velocity	
Maximum <sup>5</sup>	300 cm/h
Temperature stability	2°C to 40°C
Storage	2°C to 8°C, 20% ethanol or 2% benzyl alcohol
<b>Delivery conditions</b>	20% ethanol or 2% benzyl alcohol (on request)

 $<sup>^{1}\,</sup>$  Median particle size of the cumulative volume distribution.

Determined at 10% breakthrough by frontal analysis at a mobile phase velocity of 100 cm/h (6 min residence time) and 150 cm/h (4 min residence time) in a lab scale column with a 10 cm bed height in PBS buffer, pH 7.2.


<sup>&</sup>lt;sup>3</sup> pH range where the resin can be operated without significant change in function.

<sup>&</sup>lt;sup>4</sup> pH range where the resin can be subjected to cleaning- or sanitization-in-place without significant change in function.

<sup>5</sup> In an AxiChrom column with 30 cm diameter and 20 cm bed height, using a buffer with the same viscosity as water at 20°C.

#### **Alkaline stability**

MabSelect VL resin is stable in alkaline conditions. The graph below shows the relative dynamic binding capacity after 175 cycles of alkaline treatment. Capto L resin was not included in this study since it's not stable in 0.1 M NaOH.

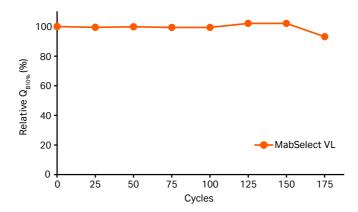


Each cycle consisted of:

- 5 column volumes (CV) of binding buffer, PBS, pH 7.2
- 5 CV 50 mM sodium citrate, pH 2.5
- 5 CV ultrapure water
- 3 CV 0.1 M NaOH, 15 minutes contact time
- 5 CV binding buffer, pH 7.2

The dynamic binding capacity,  $Q_{B10\%}$  , for IgG  $\kappa1$  was measured regularly during the study.

#### Pressure/flow curve

The relationship between the pressure and the flow velocity for MabSelect VL resin is the same as for MabSelect PrismA resin. The graph below shows a pressure/flow curve in water, at 20°C, for 10 cm and 20 cm packed bed of MabSelect PrismA in AxiChrom 300 column. The column was equipped with stainless steel bed support, and the packing factor used was 1.18. The additional pressure from test system and tubing has been subtracted.

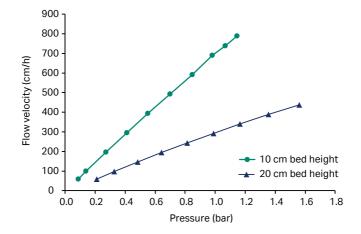

## 4 Process development

#### **Recommended formats**


For initial studies on MabSelect VL resin, PreDictor<sup>TM</sup> plates or PreDictor RoboColumn<sup>TM</sup> units are preferably used. PreDictor plates are 96-well plates, prefilled with chromatography resin, for rapid screening of chromatographic conditions at small scale. PreDictor RoboColumn units are 200 or 600  $\mu$ L columns prefilled with chromatography resin, which can be used for dynamic experiments when sample is limited, or for high throughput experiments. For further optimization in small scale columns, we recommend prepacked HiTrap<sup>TM</sup> or HiScreen<sup>TM</sup> columns.

#### Operating window

Choose a residence time that meets the requirements for dynamic binding capacity and nominal fluid velocity according to the figure below. The other cycle operations including wash, elute, and equilibration steps can be run at maximum operational flow velocity, see *Resin properties, on page 5*.

Use the figure as a guide when determining suitable bed height and operating flow velocity in terms of residence time and thus capacity and pressure drop.

The figure shows the recommended combinations of bed height and operational nominal flow velocity for MabSelect VL and the resulting residence time in the interval 1 to 15 minutes for any bed height and flow velocity. Pressure drop and packing limitations at large scale are also included. The solid curved line shows the calculated large-scale column pressure restriction which is 2 bar according to specification (300 cm/h at 2 bar and 20 cm bed height). The dashed vertical line indicates that bed height below 10 cm is not favorable since large diameter columns have a very different aspect ratio, and that packing short wide beds is a greater challenge.

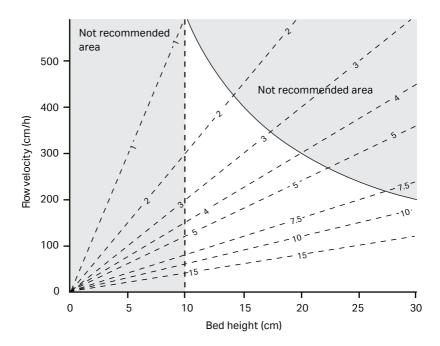

## 5 Recommended screening condition

#### **Recommended buffers**

For MabSelect VL resin a citrate based buffer system is recommended for elution. The buffering capacity of a citrate buffer is better suited for the recommended pH ranges in comparison to an acetate or phosphate buffer system.

**Binding buffer:** 20 mM sodium phosphate, 0.15 M NaCl, pH 7.4

**Elution buffer:** 50 mM sodium citrate, pH 2.5

#### **Experimental conditions**

Follow the steps below to set up the screening for the optimal conditions.

Step	Action
1	Equilibrate the column with 5 column volumes (CV) of buffer A.
2	Apply a small sample of antibody fragment at a residence time > 3 min.
3	Wash the column with 5 CV of buffer A.
4	Elute the column with a 10 CV linear gradient from 0 to 100 buffer B.
5	Collect fractions into titrating diluent (for example, 1.0 M Tris-HCl, pH 8.0, so that the diluent volume equals 5% of the programmed fraction volume).
6	Regenerate the column with 5 to 10 CV of 100% buffer B.
7	Wash the column with 3 CV of buffer A.
8	Perform Cleaning-In-Place (CIP) with 5 CV of NaOH (15 mM).
9	Re-equilibrate the column with buffer A.

To minimize the use of buffer, we recommend optimizing the washing procedure with respect to residence time, volumes, pH, and conductivity.

### Optimizing elution conditions

Determine the highest pH that allows efficient desorption of antibody fragments from the column. This prevents denaturation of sensitive antibodies due to low pH exposure.

Stepwise elution is often preferred in large-scale applications because it allows the target monoclonal antibodies to be eluted in a more concentrated form, with less buffer consumption and shorter cycle times. It might be necessary to decrease the flow rate due to high protein concentrations in the eluate.

#### **Optimizing dynamic binding capacity**

Determine the dynamic binding capacity for the target antibody by frontal analysis using real process feedstock. The dynamic binding capacity is a function of the sample residence time and should therefore be defined over a range of different sample residence times.

# 6 Removal of leached ligand from final product

The MabSelect VL ligand can be analyzed using commercially available protein L immunoassays, contact Cytiva for more information. Leakage from MabSelect VL is generally low but in many monoclonal antibody applications it is required to remove leached ligand from the final product. Techniques to remove leached ligand include:

- ion exchange chromatography (IEX)
- multimodal exchange chromatography (MMC)
- size exclusion chromatography (SEC)

For an example of removal of leached ligand and antibody aggregates, refer to application note *Two step purification of monoclonal IgG1 from CHO cell culture supernatant (CY13148).* 

Methods used for removal of leached ligand from MabSelect SuRe $^{\text{TM}}$  are applicable also to removal of leached ligand from MabSelect VL.

## 7 Packing columns

### 7.1 General packing information

#### **Definitions**

The bed height of a gravity settled bed often differs from the bed height of a bed settled at a given flow (consolidated). Therefore, the compression factor (CF) must be separated from the packing factor (PF).

L<sub>settled</sub> Settled bed height/Gravity settled bed height.

Bed height measured after settling the resin by gravity.

L<sub>cons</sub> Consolidated bed height.

Bed height measured after settling the resin at a given flow velocity.

L<sub>packed</sub> Packed bed height.

CF Compression factor  $CF = L_{settled} / L_{packed}$ 

PF Packing factor  $PF = L_{cons} / L_{packed}$ 

A<sub>C</sub> Cross-sectional area of the column

 $V_C$  Column volume  $V_C = L_{packed} \times A_C$ 

 $C_{slurrv}$  Slurry concentration

#### **Slurry preparation**

Slurry preparation can be performed manually, or mechanically, for example by using a Media Wand $^{\text{TM}}$  or Media Handling Unit. Shaking gives good results, but is often not practical for larger volumes. Use soft stirrers without sharp edges for stirring. Media Wand suspends the resin directly in the container and transfers the slurry to the slurry tank in a single operation. This makes it suitable for large-scale packing.

Measure the slurry concentration accurately to get the correct amount of resin for packing to target bed height or compression. Let the resin settle overnight in 20% ethanol in a measuring cylinder to determine the slurry concentration or use the Slurry Concentration Kit, see *Ordering information*, on page 30.

#### Compression factor for MabSelect VL

The compression factor (CF) is used to calculate the required resin volume (V) for packing a desired bed height:

 $V = (A_C \times L_{packed} \times CF) / C_{slurry}$ 

CF for gravity settled MabSelect VL in 20% ethanol is 1.10.

## 7.2 Packing laboratory scale columns

## Recommended laboratory scale columns

Column	Inner diameter (mm)	Bed volume <sup>1</sup> (mL)	Bed height (cm)
Tricorn 5/100	5	2	10
Tricorn 10/100	10	8	10
HiScale 16/40	16	20 to 70	max. 35
HiScale 26/20	26	53 to 106	max. 20
HiScale 26/40	26	53 to 186	max. 35
HiScale 50/20	50	196 to 393	max. 20
HiScale 50/40	50	196 to 687	max. 35

<sup>&</sup>lt;sup>1</sup> Bed volume range calculated from 10 cm bed height to maximum bed height

#### **Materials**

- MabSelect VL
- plastic spoon or spatula
- P4 glass filter funnel
- · vacuum suction equipment
- · filtering flask
- · measuring cylinder
- · packing solution

#### For Tricorn columns:

- Tricorn column
- · Tricorn packing tube
- Tricorn 5 medium filter kit, or Tricorn 10 medium filter kit

#### For **HiScale** columns:

- HiScale column
- HiScale packing tube (not needed for lower bed heights)

Make sure that all materials and equipment are at room temperature before starting the packing.

#### **Equipment**

ÄKTA™ system or a stand-alone pump can be used for packing, depending on the flow rate required.

To avoid column drainage during packing, a pressure relief valve can be attached to the outlet valve of the system. Setting a low back-pressure of 0.02 MPa (0.2 bar, 2.9 psi) is sufficient.

#### **Equilibration to packing solution**

Follow the step below to equilibrate and suspend the resin in packing solution to the recommended slurry concentration.

Step	Action
1	Attach a glass filter funnel to a filtering flask.
2	Suspend the resin by shaking the measuring cylinder, and pour the slurry into the P4 glass filter funnel.
3	Wash 5 times with 2 CV of packing solution. Gently stir with a spatula between additions.
4	Pour the washed resin from the glass filter funnel into a beaker.
5	Add packing solution to obtain the recommended slurry concentration for the column used.

The resin is ready to be packed in the laboratory scale column used.

#### **Packing Tricorn columns**

Column	Tricorn 5	Tricorn 10
Bed height (cm)	10	10
Packing solution	20% ethanol with 0.2 M NaCl	
Slurry concentration (%)	60	60
Packing flow velocity (cm/h)	1070	764
Packing flow rate (mL/min)	3.5	10

1 1	
	Net the filters with ethanol and assemble the column according to <i>Tricorn</i> Empty High Performance Columns (CY17144).
	Attach a packing connector and a packing tube to the top of the column tube. Fasten the column tube in a stand.
	Fill the column with slurry suspended in packing solution, and top up with packing solution.
	Assemble a bottom piece to the top of the packing tube. Make sure that no air s trapped under the filter.
	Connect the column top to the pump, and start a downflow with packing solution. The packing flow velocity is shown in the previous table.
6 L	Let the flow continue for 10 minutes.
7 T	Furn off the flow and place a stop plug in the column bottom.
	Disconnect the packing tube and remove any excess resin 2.4 cm from the top of the tube using a pipette.
9 T	Fop up the column with packing solution.
10 A	Attach the top adapter. Make sure no air is trapped under the filter.
	Furn the adapter downwards until it is 1 to 2 mm above the resin bed to displace any air in the adapter tubing.
	Connect the top adapter to the pump. Make a drop-to-drop connection to prevent air from entering the column.
	Start a downflow with packing solution. The packing flow velocity is shown in the previous table.
14 L	Let the flow continue for 5 minutes.
15 N	Mark the bed height and stop the pump.
	Furn the adapter down to the resin bed and then given an extra 1/3 turn. Lock the top adapter by pushing down the lock ring.
17 N	Measure the bed height to determine packing efficiency.

The column is ready to for efficiency testing.

### **Packing HiScale columns**

Table 7.1: Main features of the packing method for HiScale 16

Column	HiScale 16/20	HiScal	e 16/40
Bed height (cm)	10	20	35
Packing solution	20% ethanol v	vith 0.4 M NaCl	0.4 M NaCl in ultrapure water
Slurry concentration (%)	55	55	55
Packing factor (PF)	1.12	1.10	1.02
Packing flow velocity (cm/h)	200	200	358
Packing flow rate (mL/min)	6.7	6.7	12
Conditioning flow velocity (cm/h)	500	400	230
Conditioning flow rate (mL/min)	16.8	13.4	7.7

Table 7.2: Main features of the packing method for HiScale 26

Column	HiScale 26/20	HiScal	e 26/40
Bed height (cm)	10	20	35
Packing solution	20% ethanol w	vith 0.4 M NaCl	0.4 M NaCl in ultrapure water
Slurry concentration (%)	55	55	58
Packing factor (PF)	1.12	1.12	1.06
Packing flow velocity (cm/h)	200	200	362
Packing flow rate (mL/min)	17.7	17.7	32
Conditioning flow velocity (cm/h)	500	400	230
Conditioning flow rate (mL/min)	44.2	35.4	20.4

Table 7.3: Main features of the packing method for HiScale 50  $\,$ 

Column	HiScale 50/20	HiScal	e 50/40
Bed height (cm)	10	20	35
Packing solution	20% ethanol w	vith 0.4 M NaCl	0.4 M NaCl in ultrapure water
Slurry concentration (%)	55	55	55
Packing factor (PF)	1.12	1.12	1.02
Packing flow velocity (cm/h)	200	200	367
Packing flow rate (mL/min)	65.4	65.4	120
Conditioning flow velocity (cm/h)	350	300	230
Conditioning flow rate (mL/min)	114.5	98.2	75.3

Step	Action
1	Assemble the column according to the column instructions, <i>HiScale columns</i> (10, 16, 26, 50) and accessories (28967470).
2	Attach a packing connector and a packing tube to the top of the column tube if needed to achieve the required bed height. Fasten the column tube in a stand. Connect the bottom adapter to the system.
3	Prime the bottom net with a slow upflow (30 cm/h) of packing solution. Make sure that the net is thoroughly wetted. Remove any air bubbles that are trapped under the net by light suction with a syringe.
4	Fill the column with slurry suspended in packing solution. If needed, top up the slurry with extra packing solution so the top adapter will dip into the slurry to avoid air under the net.
5	Connect the top adapter to the pump and prime with a slow downflow. To remove air from the adapter, hold the adapter with the net facing upwards.
6	At tach the top  adapter  to  the  top  of  the  packing  tube.  Tighten  all  seals  firmly.
7	Start a downflow with packing solution. The packing flow velocity is shown in the tables at the beginning of the section.

Step	Action
8	Let the flow continue until the bed consolidates. Do not let the bed consolidate for too long because that will make reading the bed height less accurate.
9	Use the graduation marks on the column to measure the bed height. A light source can facilitate the measurement of the bed height.
10	Turn off the flow. Disconnect the packing tube and the packing connector over a beaker or a sink.
11	Reassemble the top adapter. Make sure no air is trapped under the net.
12	Turn the adapter down until it is 10 mm above the resin bed to displace any air in the adapter tubing. Make sure that the bed surface is not disturbed.
13	Tighten the O-ring of the adapter, and turn the end cap down to the bed height measured at step 9.
14	Calculate the final bed height by dividing the consolidated bed height with the desired packing factor, $L_{packed}$ = $L_{cons}$ /PF. Packing factors for the different column sizes and bed heights are shown in the tables at the beginning of the section.
15	Turn the top adapter clockwise, smoothly and slowly, until the desired bed height is reached.
16	Start a downwards flow with packing solution. The conditioning flow velocity is shown in the tables at the beginning of the section.
17	Let the flow run for 10 column volumes.

The column is ready for efficiency testing.

### 7.3 Packing large-scale columns

#### **Overview**

 $\label{lem:mabSelect} \begin{tabular}{ll} MabSelect\,VL\,can\,be\,packed\,in\,pilot-\,and\,large-scale\,columns. There\,are\,several\,possible\,packing\,procedures,\,depending\,on\,the\,column\,and\,equipment\,used. \end{tabular}$ 

Refer to the instructions for the relevant column for complete packing instructions. Also refer to the application note *Packing MabSelect and MabSelect Sure resins using verified methods (CY13950)* describing packing methods for similar resins in large-scale columns.

## Intelligent Packing in AxiChrom columns

When packing AxiChrom 50 to 200 columns with an ÄKTA system, Intelligent Packing control is managed by the UNICORN™ system control software. For AxiChrom 300 to 1600 columns, Intelligent Packing is performed by the AxiChrom Master, a separate unit that comprises a touchscreen-operated user interface, or from the UNICORN software on the ÄKTAprocess™ system.

In the Intelligent Packing wizard, packing methods are created by entering values for the following packing variables:

- column
- resin
- · packing factor
- · slurry concentration
- · target bed height

#### Recommended large-scale columns

Column	Inner diameter (mm)	Bed volume <sup>1</sup> (L)	Bed height (cm)
AxiChrom <sup>2</sup>	50 to 200	0.2 to 13	max. 40
AxiChrom <sup>2</sup>	300 to 1600	7 to 804	max. 40
BPG <sup>3</sup>	100 to 300	0.8 to 28	max. 40
Chromaflow standard <sup>4</sup>	400 to 800	13 to 151	max. 30

<sup>&</sup>lt;sup>1</sup> Bed volume range calculated from 10 cm bed height to maximum bed height.

All large-scale columns can be supplied as variable bed height columns. Do not choose large-diameter columns if the bed height is low.

#### **Packing solution**

Recommended packing solutions for MabSelect VL are:

- water
- 20% ethanol
- sodium chloride solution

<sup>&</sup>lt;sup>2</sup> Intelligent Packing method can be used.

<sup>&</sup>lt;sup>3</sup> The pressure rating of BPG 450 is too low to use with MabSelect resins.

<sup>&</sup>lt;sup>4</sup> Larger pack stations might be required at larger diameters.

#### Packing factors for MabSelect VL

When packing BPG and AxiChrom columns, the packing factor (PF) is used to calculate the target bed height after the consolidation step. MabSelect VL settles differently in different solutions. Adding NaCl to the packing solution slows the settling of the resin beads and allows them to settle less tightly. As little as 10 mM NaCl changes the consolidated bed height with 2% and the gravity settled bed height with 16%, compared to water. The table below shows typical packing factors for MabSelect VL in different solutions for optimal bed performance, where the bed is consolidated at 60 cm/h.

Solution	Packing factor
Water	1.18
20% ethanol	1.18
0.4 M NaCl	1.20

### 7.4 Evaluation of column packing

#### Frequency

Test the column efficiency to evaluate the packing quality:

- · After completion of a packing procedure.
- At regular intervals during the working life of the column.
- When a deterioration in separation performance is observed.

#### Column efficiency testing

The best method of expressing the efficiency of a packed column is in terms of the height equivalent to a theoretical plate (HETP) and the asymmetry factor ( $A_s$ ). The values are easily determined by applying a test sample such as 1% acetone solution or sodium chloride to the column.

**Note:** Use a concentration of 0.8 M NaCl in water as sample and 0.4 M NaCl in water as eluent.

The calculated plate number depends on the test conditions and must only be used as a reference value. It is important that the test conditions and the equipment are the same so that the results are comparable.

**Note:** Changing the solute, solvent, eluent, sample volume, flow velocity, liquid pathway, temperature, chromatography system, etc., influence the results.

For more information about column efficiency testing, consult the application note *Column efficiency testing (CY13149)*.

For optimal column efficiency results, the sample volume must be approximately 1% of the column volume and the flow velocity 30 cm/h. If an acceptance limit is defined in relation to column performance, the column plate number can be used as one of the acceptance criteria for the column use.

#### Method for measuring HETP and $A_s$

Calculate HETP and A<sub>S</sub> from the UV curve (or conductivity curve) as follows:

$$N = 5.54 \times \left(\frac{V_R}{W_h}\right)^2$$

$$V_R = \text{volume eluted from the start of sample application to}$$

$$\text{the peak maximum}$$

$$W_h = \text{peak width measured as the width of the recorded peak}$$

$$\text{at half of the peak height}$$

$$V_R \text{ and } W_h \text{ are in the same unit}$$

The concept of reduced plate height is often used for comparing column performance. The reduced plate height, h, is calculated as follows:

$$h = \frac{\text{HETP}}{d_{50v}}$$
 
$$d_{50v} = \text{Median particle size of the cumulative volume distribution (cm)}$$

As a guideline, a value of < 3 is acceptable.


The peak must be symmetrical, and the asymmetry factor as close to 1 as possible. A typical acceptable range could be  $0.8 < A_{\rm S} < 1.5$ .

A change in the shape of the peak is usually the first indication of bed deterioration due to excessive use.

Peak asymmetry factor calculation:

$$A_s = \frac{b}{a}$$
 a = ascending part of the peak width at 10% of peak height  
b = descending part of the peak width at 10% of peak height

The figure below shows a UV trace for acetone in a typical test chromatogram from which the HETP and  $A_S$  values are calculated.

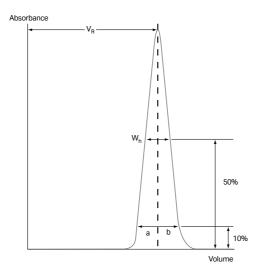

## 8 Cleaning-In-Place (CIP)

#### **General description**

CIP removes very tightly bound, precipitated, or denatured substances from the resin. The accumulated contaminants can affect the chromatographic properties of the packed column, reduce the capacity, or contaminate the subsequent runs. MabSelect VL chromatography resin allows the use of up to 0.1 M NaOH for CIP.

CIP must be performed regularly to prevent the enrichment of the contaminants and to maintain the capacity, flow properties, and general performance of the packed columns.

It is recommended to perform a CIP:

- After each time with real feed.
- When an increase in back pressure is noticed.
- If a reduced column performance is observed.
- To prevent possible cross-contamination, when the same column is used for purification of different proteins.
- Before first-time use or after long-time storage.

**Note:** An acid regeneration (pH 2.3) before CIP is recommended if the antibodies were not completely eluted.

#### **CIP** protocol

Follow the steps below to perform a CIP.

Step	Action
1	Wash the column with 3 CV binding buffer.
2	Wash with at least 3 CV NaOH (up to 0.1 M ), with a contact time of 15 minutes.
3	Wash immediately with at least 5 CV sterile and filtered binding buffer at pH 7 to 8.

#### **CIP** optimization

NaOH concentration, contact time, and frequency are typically the main parameters to vary during the optimization of the CIP. Longer contact times increase CIP efficiency. However, these conditions might also lead to a decrease in the dynamic binding capacity.

The conditions for CIP must be designed for efficient CIP and minimized loss of capacity. The nature of the feed material will ultimately determine the final CIP. However, the general recommendation is to clean the column every cycle during normal use. Depending on the nature of the contaminants, different protocols may have to be combined.

#### **CIP** recommendation

CIP is usually performed immediately after the elution. Before applying the alkaline NaOH CIP solution, it is recommended to equilibrate the column with a solution of neutral pH to avoid the direct contact between low pH elution buffer and high pH NaOH solution on the column. Mixing acid and alkaline solutions might cause a rise in temperature in the column.

## 9 Sanitization

#### Overview

Sanitization reduces microbial contamination of the chromatographic bed to a minimum. MabSelect VL is alkali-tolerant allowing the use of NaOH as sanitizing agent. Depending on concentration, NaOH is effective for inactivating viruses, bacteria, yeasts, and endotoxins.

#### **Sanitization protocol**

Follow the steps below to sanitize the column.

Step	Action		
1	Wash the column with 3 CV of binding buffer.		
2	Wash the column with at least 3 CV NaOH (up to 0.1 M).		
3	Use a contact time of at least 15 minutes for 0.1 M NaOH.		
4	Wash immediately with at least 5 CV sterile and filtered binding buffer at pH 7 to 8.		
Note:	Higher concentrations of NaOH and longer contact time inactivates microorganisms more effectively. However, these conditions might als to a decrease in the dynamic binding capacity. The conditions for sanit should therefore be evaluated to maximize microbial killing and to min loss of capacity.		

## 10 Storage

Store unused resin in its container at a temperature of  $2^{\circ}$ C to  $8^{\circ}$ C. Make sure that the screw top is fully tightened.

Equilibrate packed columns in buffer containing 20% ethanol or 2% benzyl alcohol to prevent microbial growth.

After storage, equilibrate with starting buffer and perform a blank run, including CIP, before use.

## 11 Scale-up

After optimizing the antibody fractionation at laboratory scale, the process can be scaled up to pilot and process scales.

- Keep the residence time constant to maintain the dynamic binding capacity.
- Select bed volume according to required binding capacity.
- Select column diameter according to the volume throughput requirements. Then
  determine the bed height to give the desired residence time. Bed heights of
  10 to 25 cm are generally considered appropriate.

**Note:** The back pressure increases proportionally with increasing bed height at constant nominal velocity.

- Verify the purification step with the new bed height, if it has changed.
- Keep sample concentration and elution conditions constant.

For the selection of the appropriate window of operation for MabSelect VL, refer to *Operating window, on page 8*.


## 12 Troubleshooting

Problem	Possible cause	Corrective action	
High back pressure during the run	Solutions with high viscosity are used.	Decrease the flow rate.	
	In-line filter is clogged.	Replace the in-line filter.	
	Column is clogged.	Perform CIP.	
	Adapter net/filter is clogged.	Clean or replace the adapter net/filter.	
Unstable pressure curve during sample	Air bubbles trapped in sample pump.	Remove any air bubbles from the sample pump.	
loading		Degas the sample using a vacuum degasser or an air trap.	
Gradual broadening of the eluate peak	Insufficient elution and CIP caused by contaminants accumulating in the column.	Optimize the elution conditions, the CIP protocol, or perform CIP more frequently.	
Gradual decrease in	Sample load is too high.	Decrease the sample load.	
yield	Precipitation during elution.	Optimize the elution conditions.	
	Insufficient elution and CIP.	Optimize the elution conditions, the CIP protocol, or perform CIP more frequently.	
Gradual increase in CIP peaks			
during the first ir purification cycle p		Perform a blank run, including CIP, before the first purification cycle on a new column.	

## 13 Ordering information

For additional information, see cytiva.com.

Product	Quantity	Product code
MabSelect VL	25 mL	17542001
	200 mL	17542002
	1 L	17542003
	5 L	17542004
	10 L	17542005
MabSelect VL in benzyl alcohol	1 L	On request
	5 L	On request
	10 L	On request
HiTrap MabSelect VL	1 × 1 mL	17542051
	5 × 1 mL	17542052
Tricorn 5 Medium Filter Kit	1 × 5 units	29258132
Tricorn 10 Medium Filter Kit	1 × 5 units	29258131
Slurry Concentration Kit	1 unit	29096100
Accessory kit for HiScale 16	1 unit	28966367
Accessory kit for HiScale 26	1 unit	28966374
Accessory kit for HiScale 50	1 unit	28966375





### cytiva.com

 $Cytiva\ and\ the\ Drop\ logo\ are\ trademarks\ of\ Life\ Sciences\ IP\ Holdings\ Corp.\ or\ an\ affiliate\ doing\ business\ as\ Cytiva.$ 

ÄKTAprocess, AxiChrom, BioProcess, Chromaflow, HiScale, HiScreen, HiTrap, MabSelect, MabSelect SuRe, Media Wand, PreDictor, RoboColumn, Tricorn, and UNICORN are trademarks of Global Life Sciences Solutions USA LLC or an affiliate doing business as Cytiva.

All other third-party trademarks are the property of their respective owners.

© 2022 Cytiva

 $For local \, of fice \, contact \, information, visit \, cytiva. com/contact$ 

29704861 AA V:1 02/2022